
SHADES

PELMET DETAILS

BLINDS, CURTAINS, SHUTTERS and AWNINGS

lifebyshades.com


Typical internal pelmet details

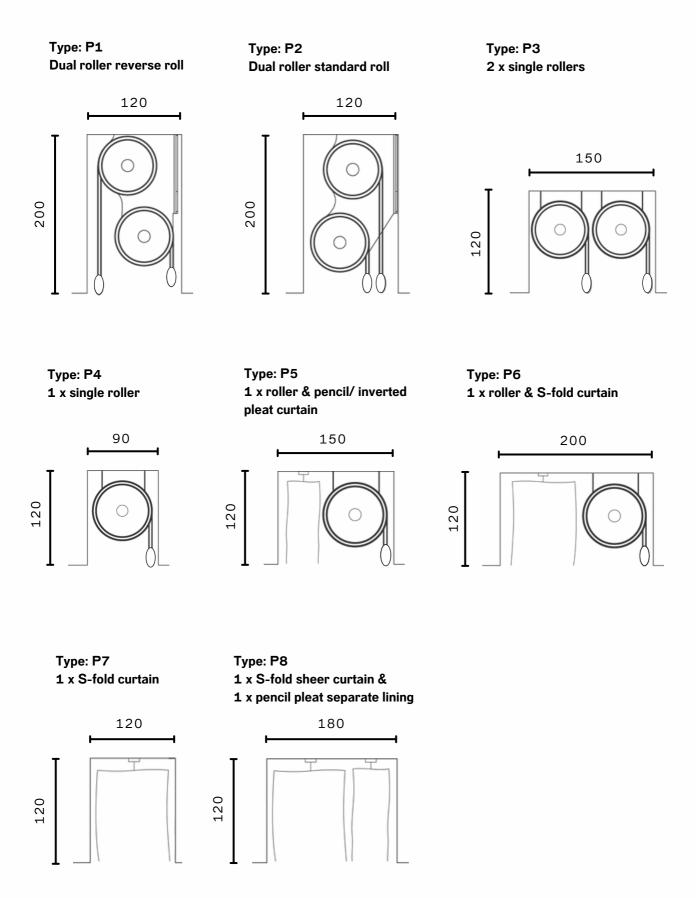


Typical internal pelmet details continued


Type: P9
1 x S-fold sheer curtain &
1 x S-fold separate lining

Type: P10 2 x separate pencil pleat headings

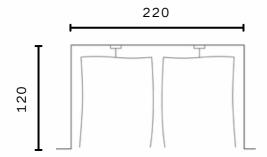

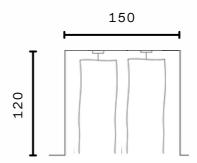


Curved track pelmet details

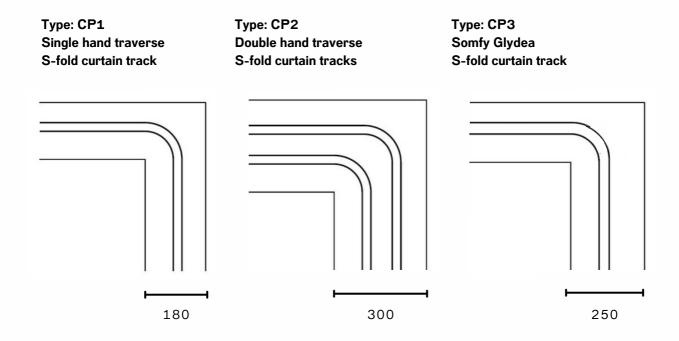


Typical external pelmet details

Type: EP1
External Venetian
*Based on a 2500mm drop

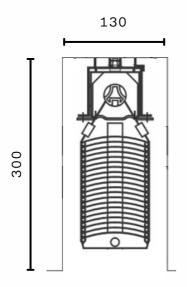

VENETIAN DROP	STACK HEIGHT
750-1000	180
1001-1250	200
1251-1500	220
1501-1750	240
1751-2000	260
2001-2250	280
2551-2500	300
2501-2750	320
2751-3000	340
3001-3250	360
3251-3500	380
3501-3750	400
3751-4000	420


Type: EP2
Cable Guide Awning (Straight Drop)

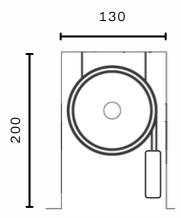




Flush mount track specifications (MANUAL)

Type: FM1
Single S-fold flush mount installation detail

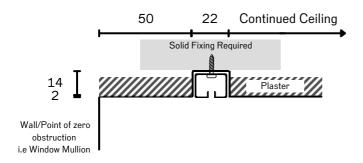


Type: FM2
Single S-fold flanged flush mount installation detail


Limitations: Requires low gauge screw with minimum size pan-head Hand traverse only Recommended for light-weight curtains only

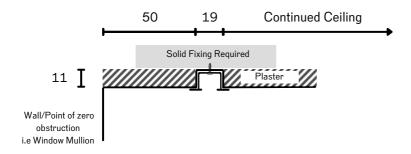

Type: FM3
Double S-fold flush mount installation detail

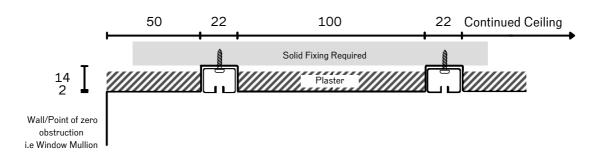


Type: FM4
Roller blind & S-fold flush mount track installation detail

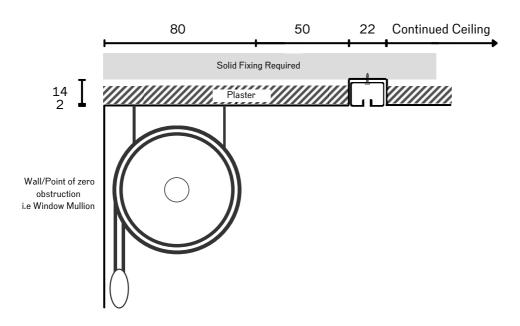

Curved Flush Mount track details

Type: CF1
Single hand traverse
S-fold curtain track
150mm radial bend

It is recommended that SHADES provide a template for all flush-mount curved tracks

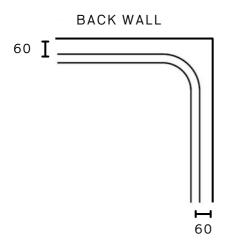

Example below of the preparation works required for an FM1 track installation.

- 90mm * 35mm timber has been installed with the underside of the timber, level with the top edge of the plaster, or the underside of the furing channels.
- The timber was pre-routed at a width of 22mm wide and 4mm deep, at a spacing of 60mm to the centre of the routed section from the back wall (NOTE This 60mm to the centre needs to be from the back wall OR any point of obstruction. I.e. a window mullion)
- Once the ceiling is sheeted with the plaster, the 4mm routed section in combination with the 10mm plaster provides a 14mm depth.
- Ideally the plasterer will use a plaster tear-away strip on each plastered edge, leaving a clean-edged 22mm wide X 14mm deep opening.
- SHADES can then install the track, with a 2mm lip, and 1mm on each side for a clean caulked finished.









SHADES



MOTORISED TRACK DETAILS


BLINDS, CURTAINS, SHUTTERS and AWNINGS

lifebyshades.com


Track specifications (MOTORISED)

Somfy Glydea track detail

Type: SM1 Somfy Glydea 300mm radial bend

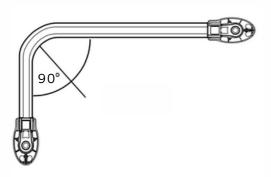



Type: SM2 Somfy Glydea Track Profile

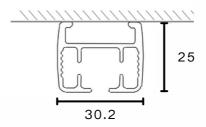

Type: SMP1 Somfy Glydea Pelmet Detail



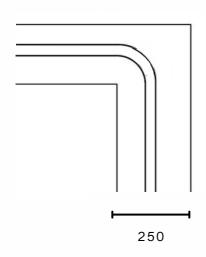

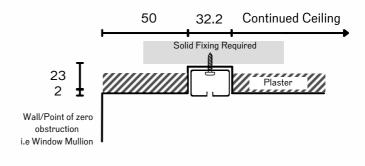

For further information, please contact our showroom on +61 (3) 9882 1166.

